










MANUAL DE INSTRUCCIONES


BT2958

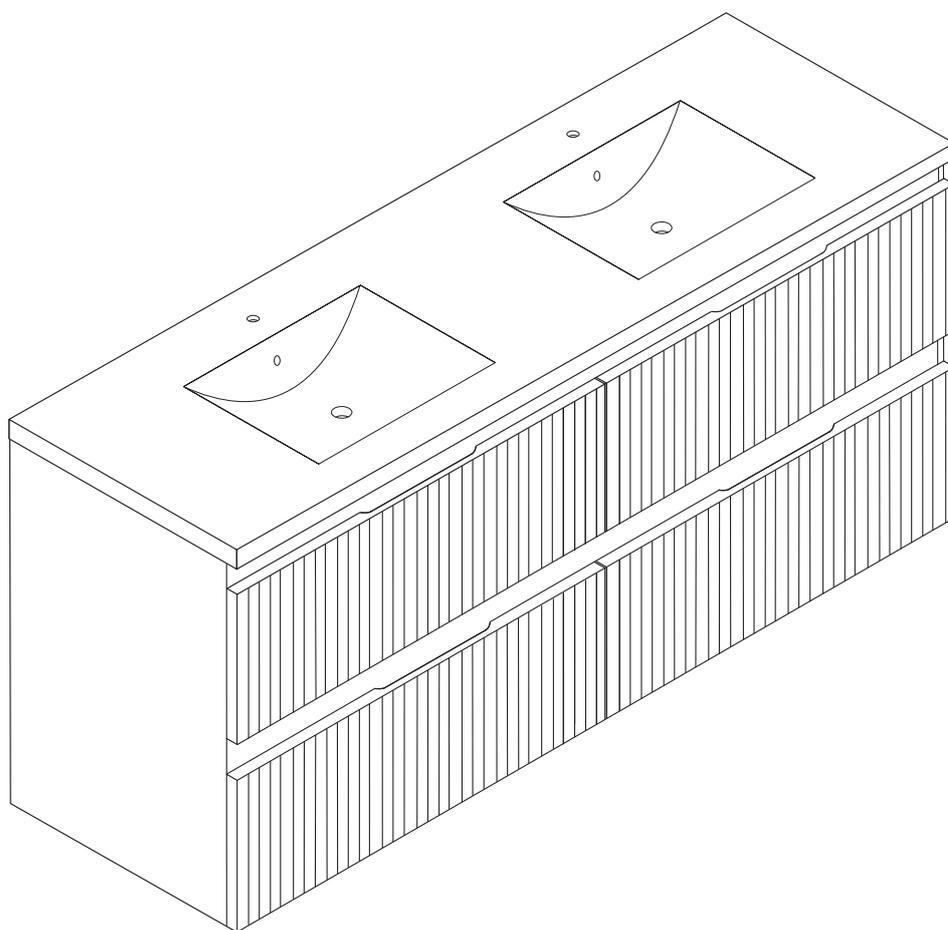

MUEBLE DE BAÑO


Serie Ibon

Parts lit			Parts lit		
NO.	Description	QTY	NO.	Hardware lit	QTY
1		1	A	 CAM LOCK	113
2		1	B	 CAM SCREW	113
3		1	C		4
4		1	D		8
5		1	E	 14mm	48
6		2	F		3
7		1	G		3
8		2	H		3
9		2			
10		2			
11		2			
12		4			
13		4			
14		2			
15		2			
16		2			
17		2			
18		2			
19		2			

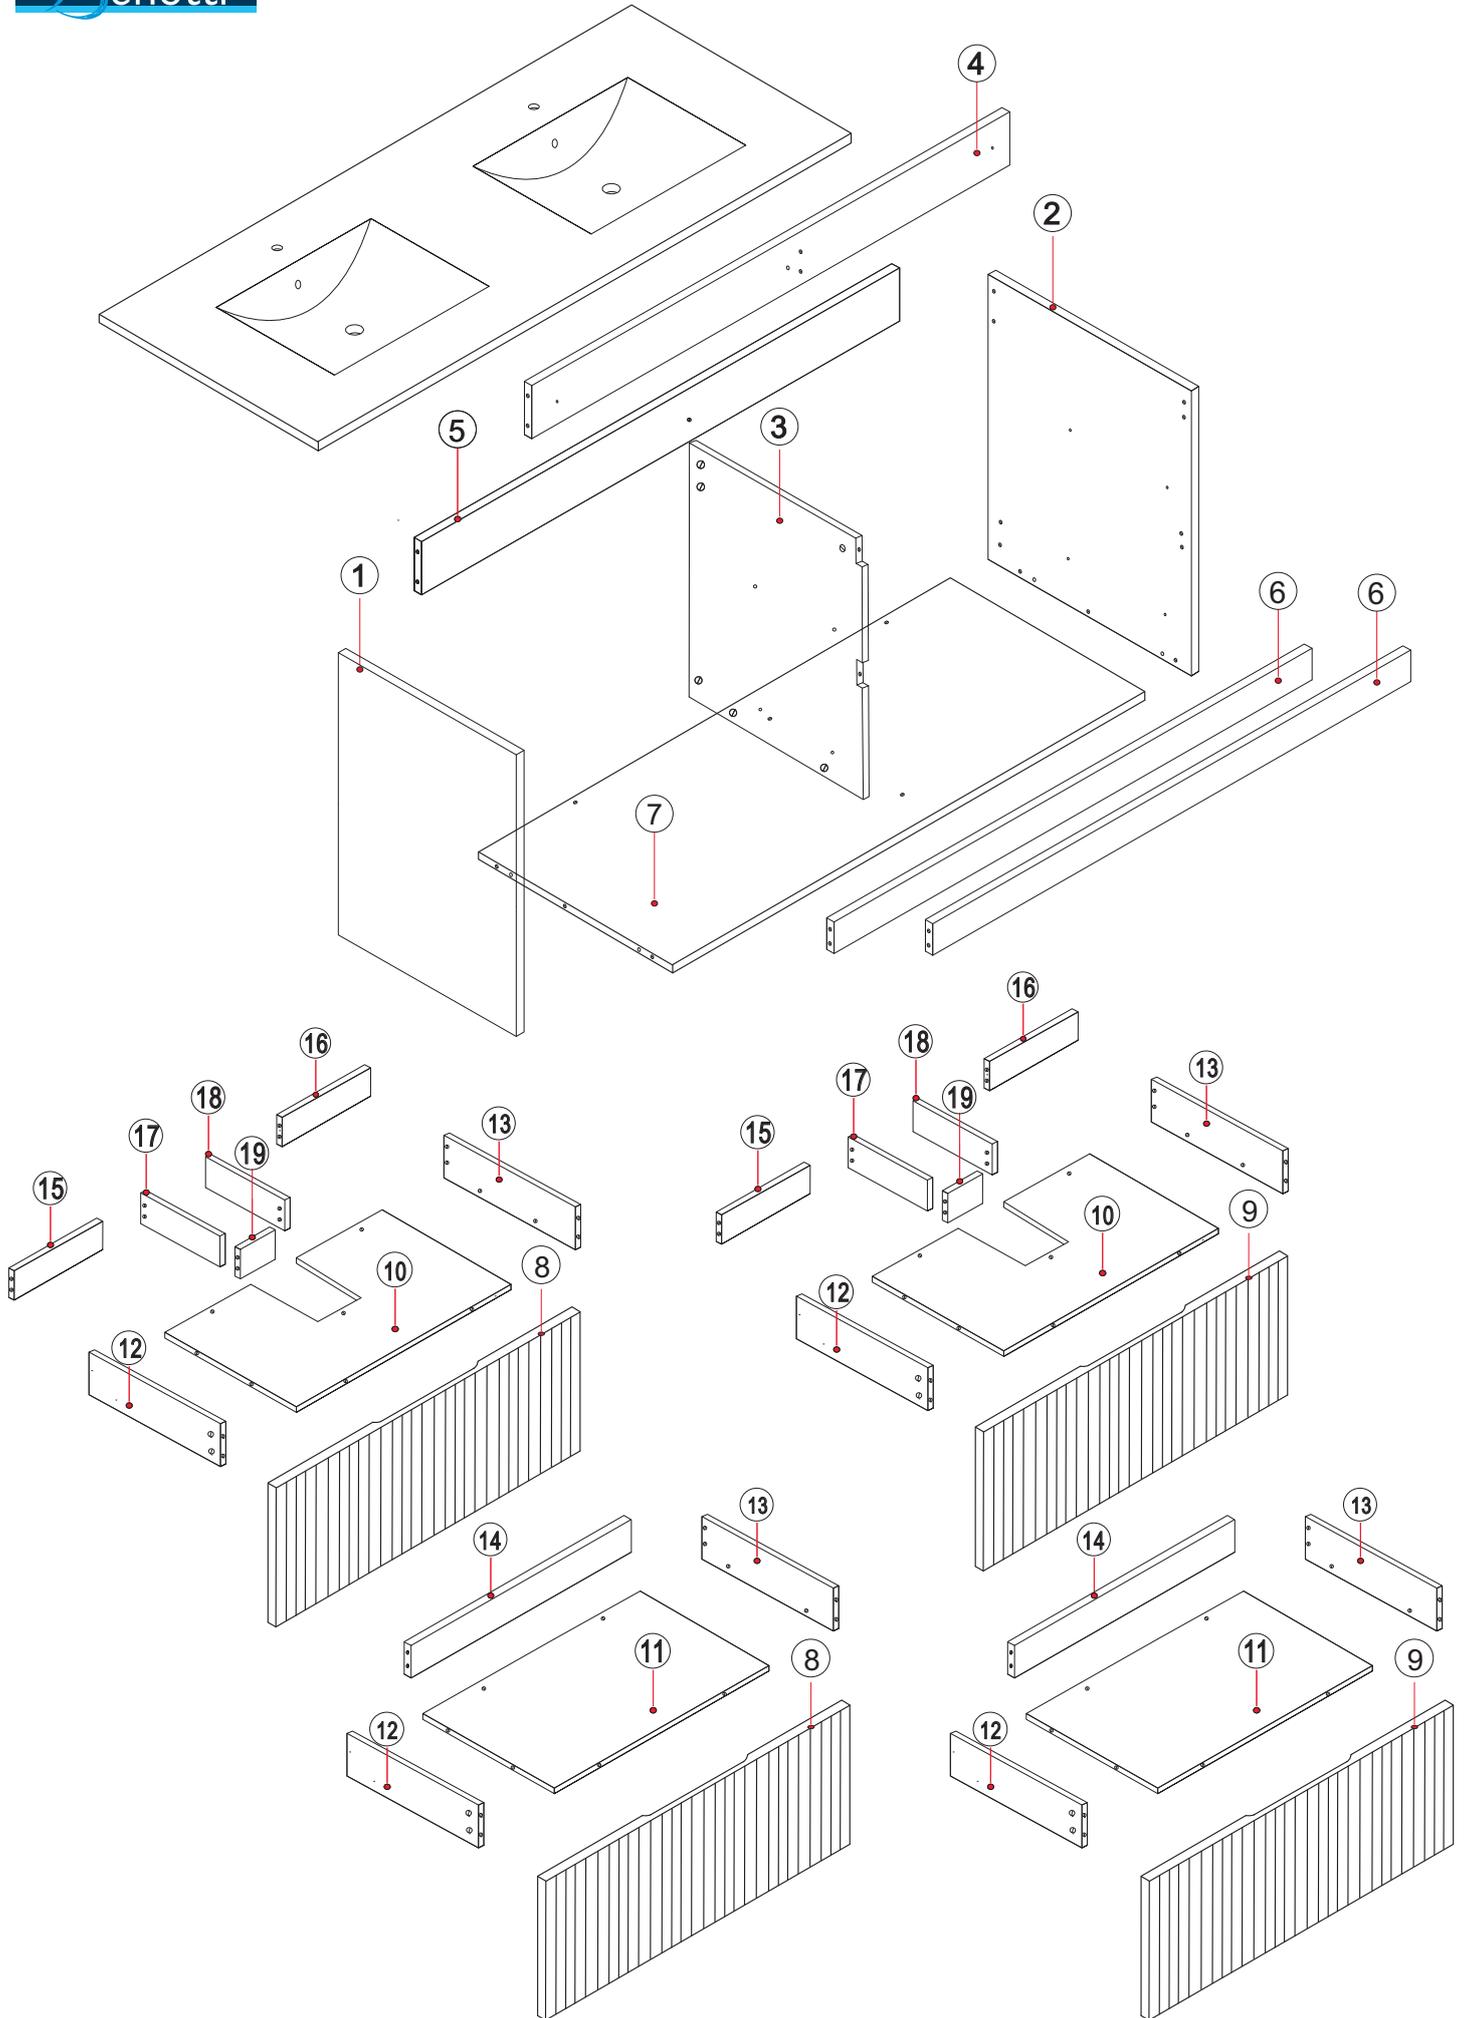


INSTALACIÓN

Step 1

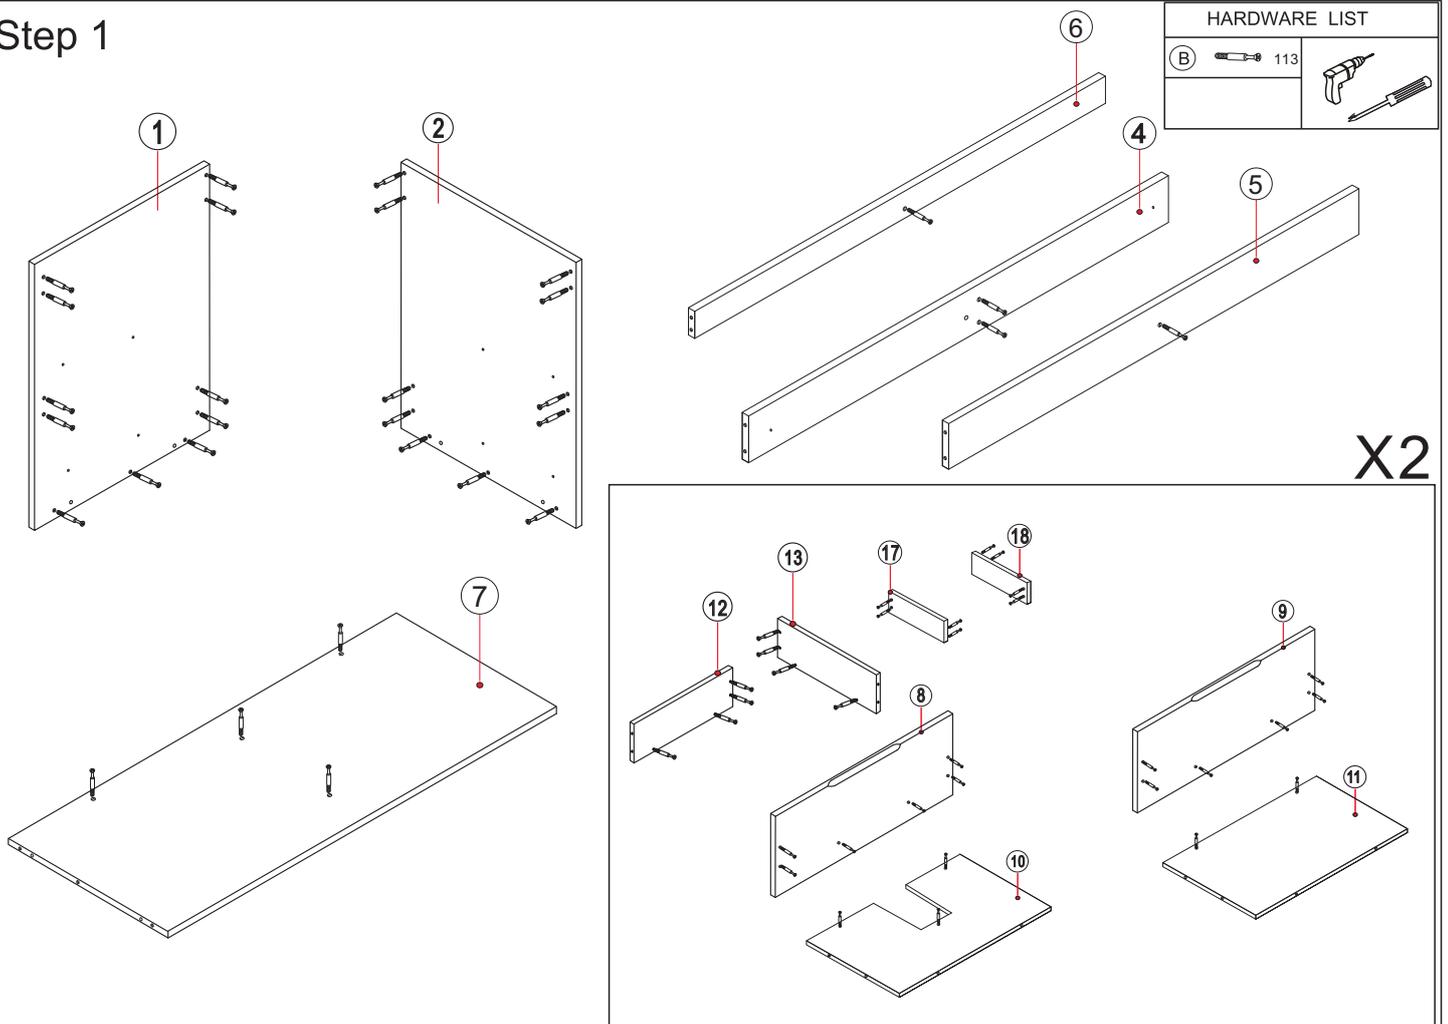


Step 2

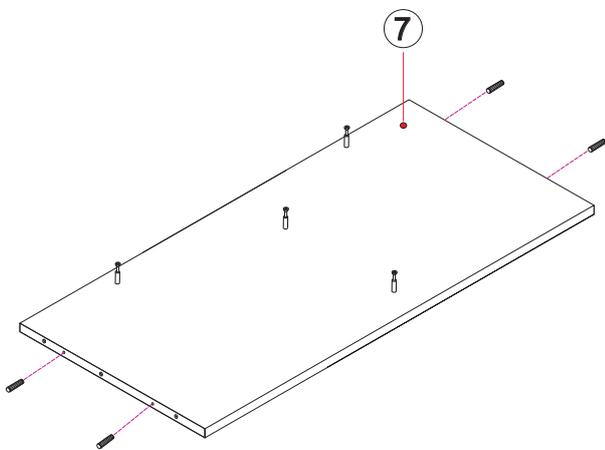

HARDWARE LIST


(C)		4	
-----	--	---	--

Step 3

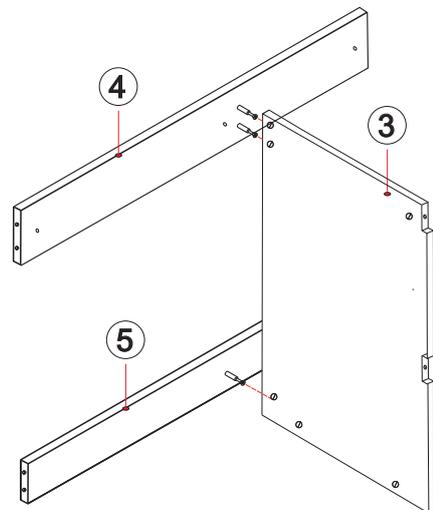

HARDWARE LIST


(A)		3	
-----	--	---	--

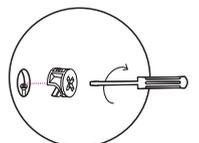

INSTALACIÓN


Step 4

HARDWARE LIST		
(A)		4
		

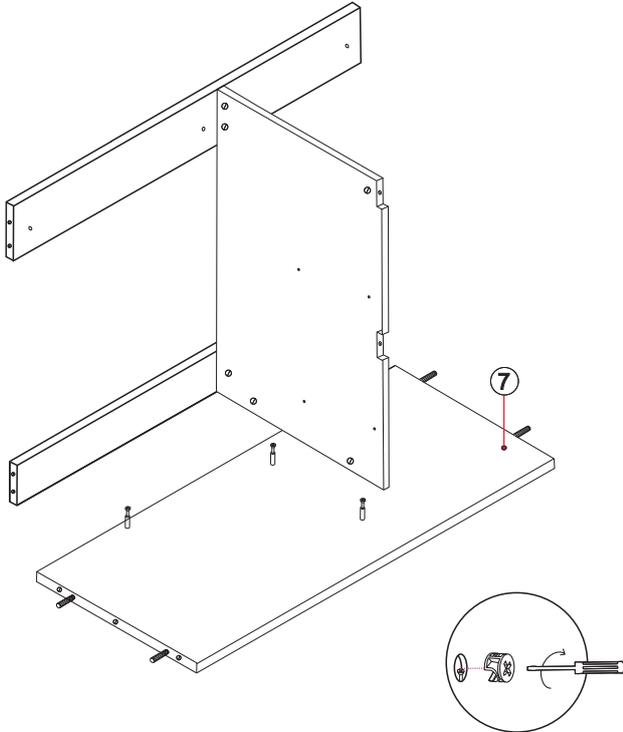


Step 5

HARDWARE LIST		
(A)		2
		

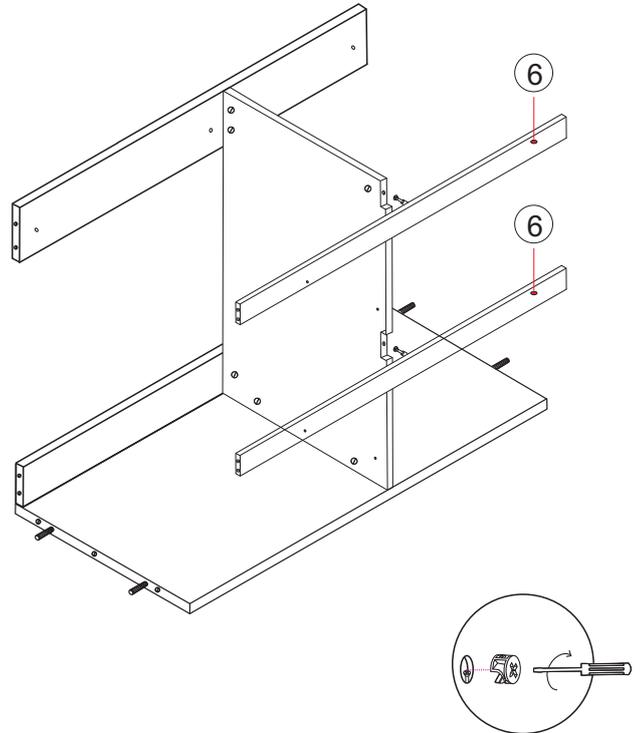


Step 6

HARDWARE LIST		
(A)		11
		

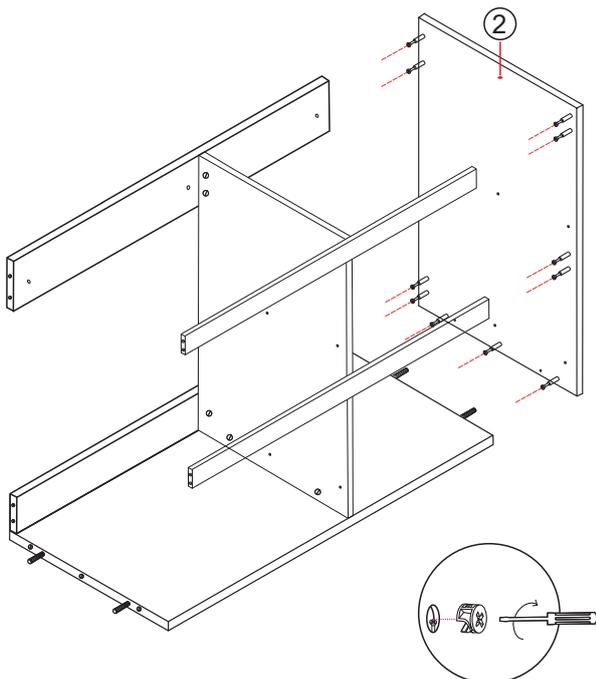

Step 7


HARDWARE LIST		
(A)		11
		

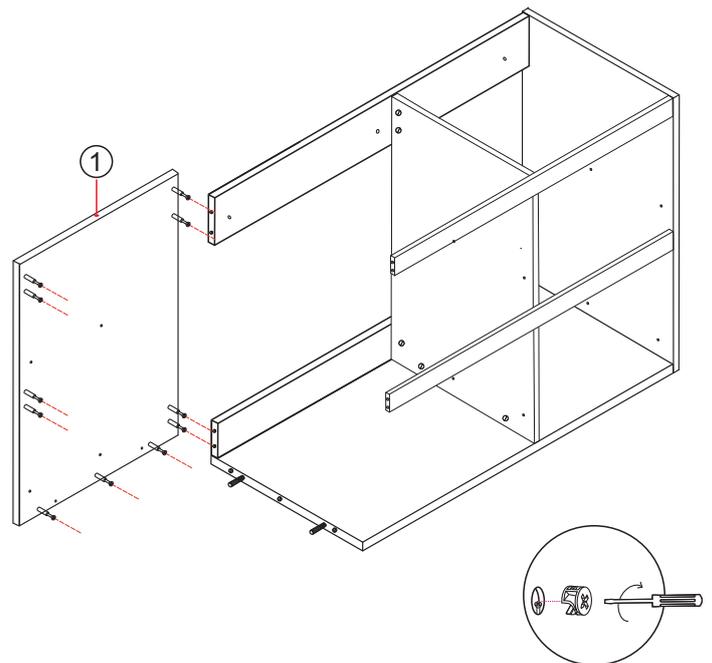

INSTALACIÓN

Step 8



HARDWARE LIST		
Ⓓ		8
Ⓔ		16
	14mm	

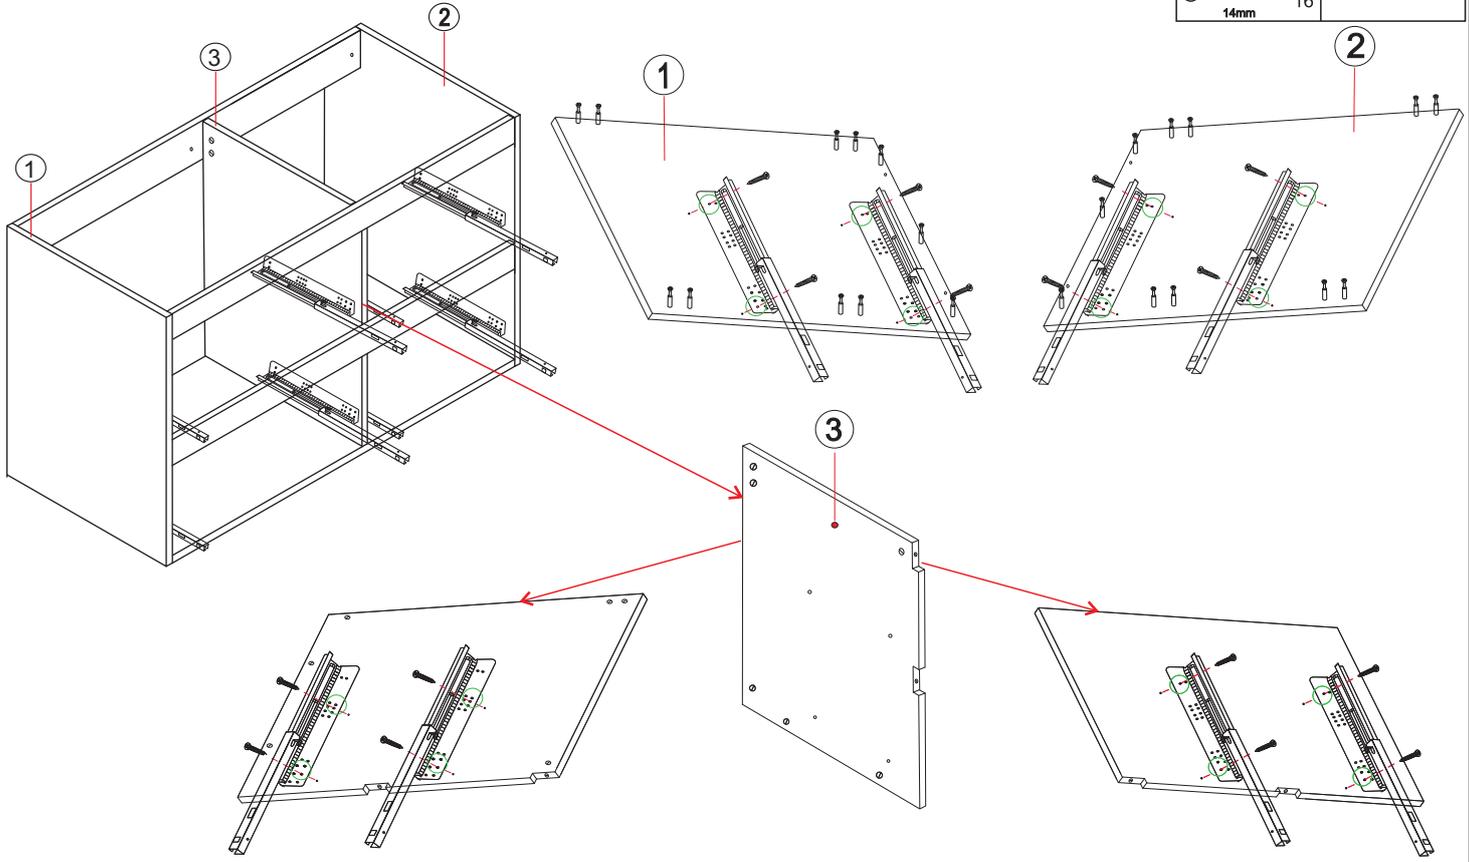

Step 9

HARDWARE LIST		
Ⓐ		8



X2

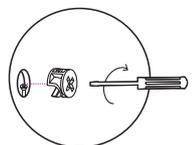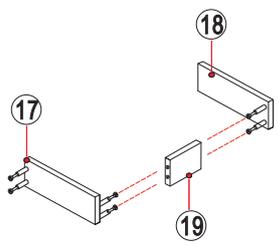

Step 10

HARDWARE LIST		
Ⓐ		8

X2

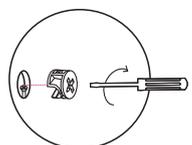
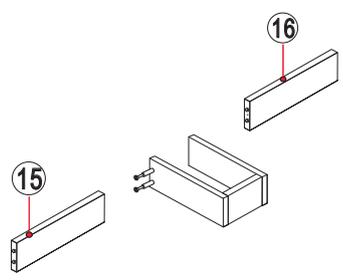


INSTALACIÓN

Step 11

HARDWARE LIST	
(A)	6



X2

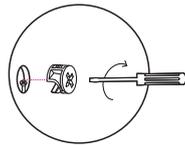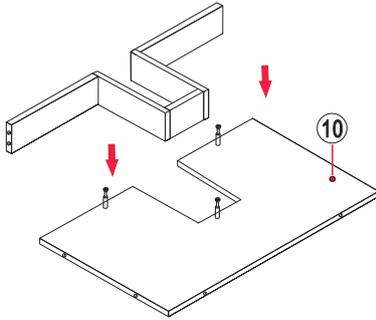

Step 12




HARDWARE LIST	
(A)	16

X2

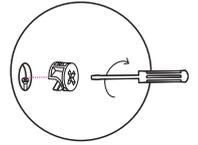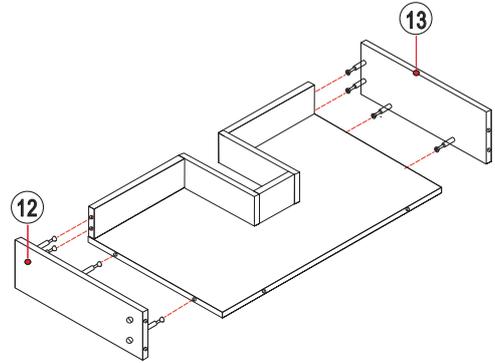

Step 13



HARDWARE LIST	
(A)	12

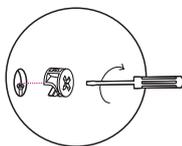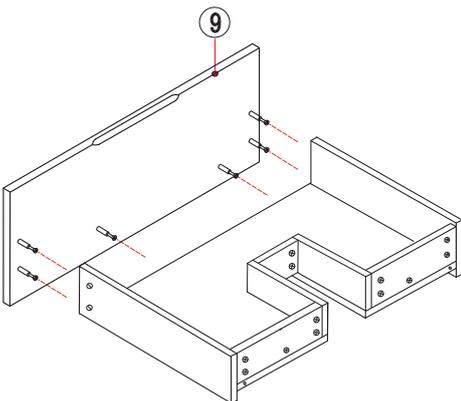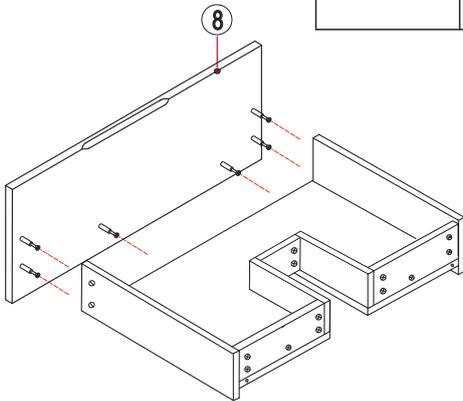

Step 14

HARDWARE LIST	
(A)	4

X2

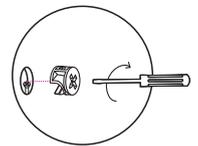
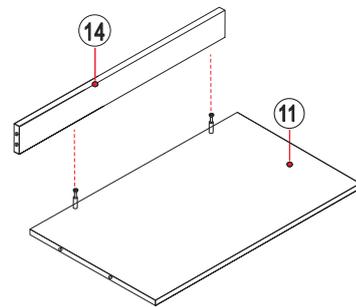


INSTALACIÓN

Step 19




HARDWARE LIST	
(A)	16

X2

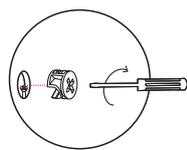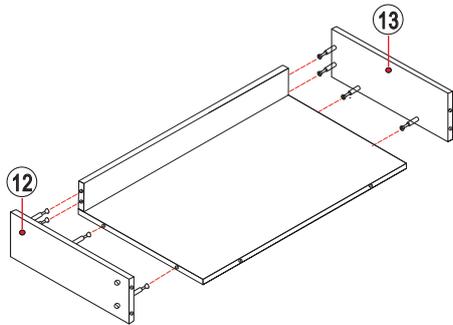




Step 20

HARDWARE LIST	
(A)	12

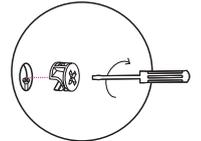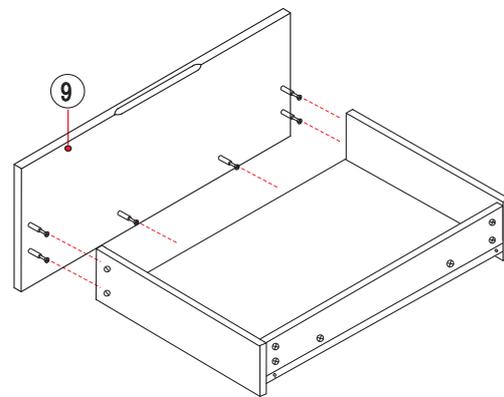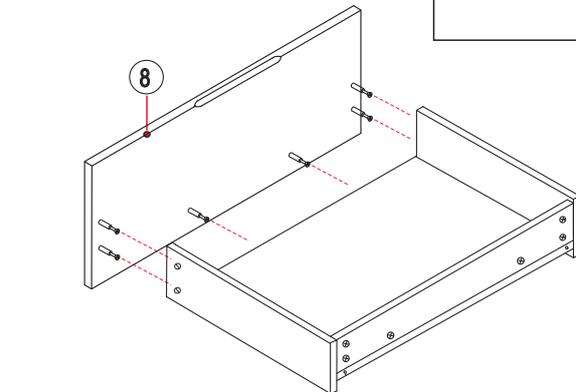

Step 21

HARDWARE LIST	
(E)	8

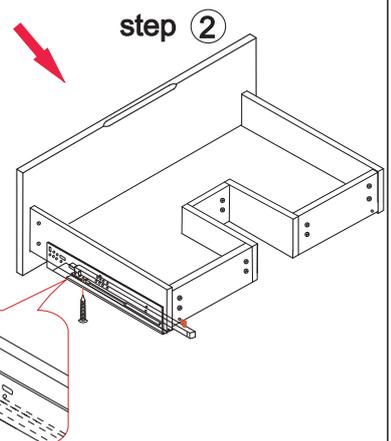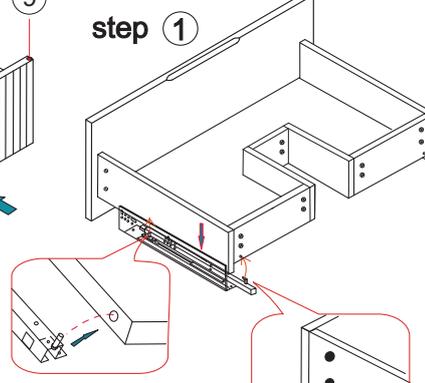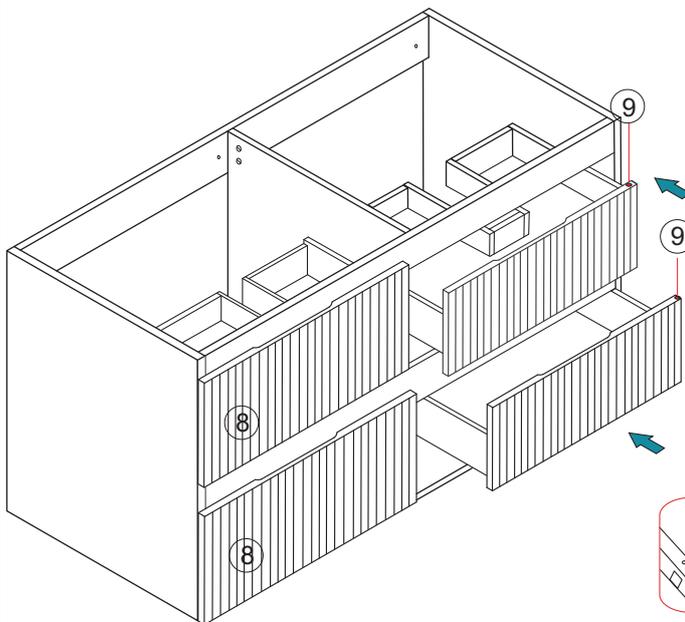


INSTALACIÓN

Step 22


HARDWARE LIST

(H)		3	
(D)		24	

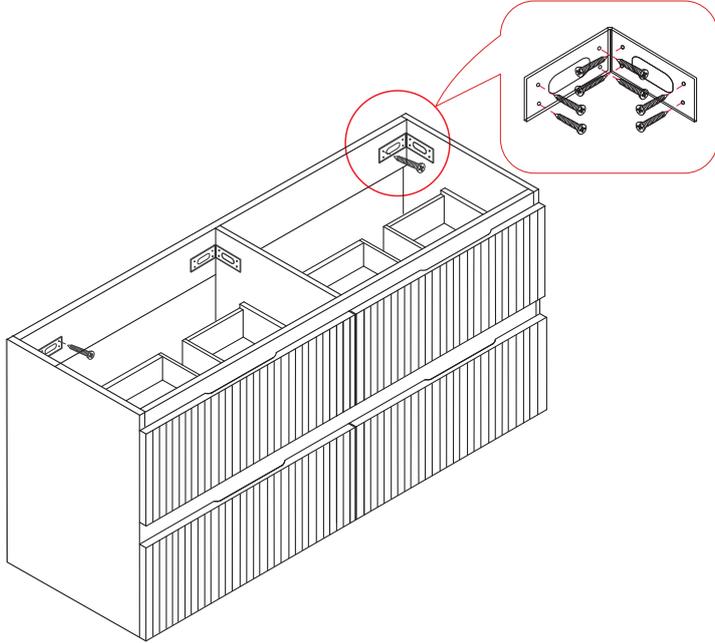


HARDWARE LIST

(F)		3	
(G)		3	

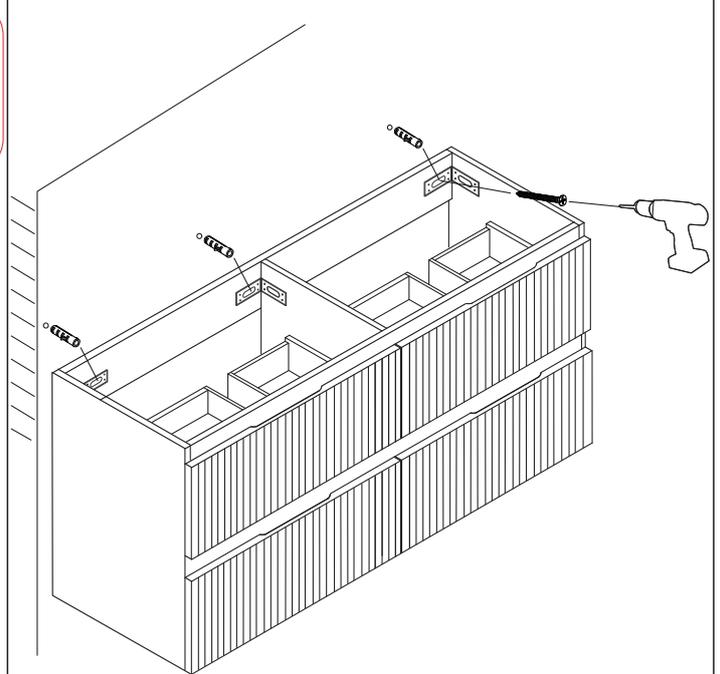

Step 23

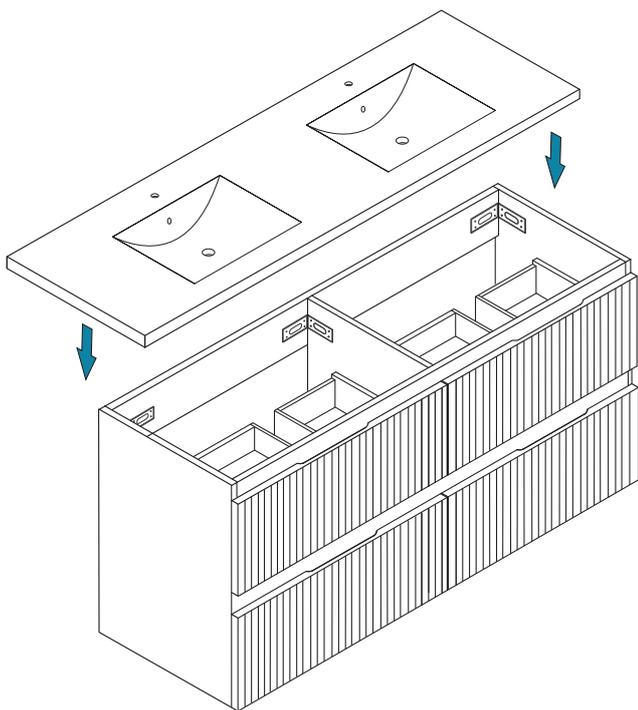

Step 24

